

DVRUpgrade® Kit Installation Instructions Single Drive Replacement Kit

TiVo Series2 (TCD240 / TCD540) Standalone Units / HUMAX Standalone Units
All Series2 DirecTV SD Units

Note: Read all instructions first! Do not place your unit or its components on a carpeted floor while open. The internals of your unit contain sensitive electronic components that can be damaged by static electricity. Under no circumstances should you touch any component of the unit's power supply, even if the unit is unplugged; it has the potential to shock you.

The drives included with your kit are pre-configured and jumpers are already set appropriately. DO NOT CHANGE JUMPER SETTINGS ON ANY DRIVE WE SUPPLY WITHOUT CONTACTING PTVUPGRADE FIRST!

Step 1 Using the Torx driver included with your kit, remove the four cover screws on the rear of the unit (on some newer units, there may be five screws).



Step 2 Remove the cover by sliding towards the rear, and lifting the back edge. The internals of your unit are shown below.



Step 3 Remove both connectors on the bottom of the drive (disk drive cable [left] - power connector [right]).



Step 4 Remove the two screws on the right side of the drive - they are attaching the drive and bracket to the TiVo chassis. Remove the drive assembly from the chassis.



Step 5 Remove the two screws from the right side of the original TiVo drive.



Step 6 Remove the two screws from the left side of the drive. Reconnect disk drive and power connectors, and re-attach drive to TiVo chassis as shown in **step 4**.

Step 7 (optional) If you wish to replace the disk drive cable with the one we've supplied, you may do so, however ensure that the BLUE connector is attached to the motherboard; either of the black connectors may be used to attach the cable to the disk drive.

Step 8 Reconnect and power-on unit. To verify successful installation, proceed to the system information screen by selecting **Messages and Setup**, and then **System Information**. Use your remote's channel-down button to view the new recording capacity of your unit.

Now proceed to view your Now Playing list, which should be empty. If you receive a "hardware error" or "error 51" message, do not be alarmed; simply proceed to the System Reset menu and perform a "clear and delete everything." Once this process is complete, you can proceed with a normal guided setup and things should work just fine. Normally, you will not have to do this.

Congratulations, you are done! If you have any questions or problems with your installation, please contact us through our website at <http://www.dvrupgrade.com/contactus.cfm>. If you have any problems viewing the illustrations in these instructions, they are also available online at http://www.dvrupgrade.com/install_instructions.cfm.

Thanks again for purchasing your upgrade kit from DVRUpgrade, Inc.