

DVRupgrade® Kit Installation Instructions Sony SVR-3000

Note: Read all instructions first! Do not place your unit or its components on a carpeted floor while open. The internals of your unit contain sensitive electronic components that can be damaged by static electricity. Under no circumstances should you touch any component of the unit's power supply, even if the unit is unplugged; it has the potential to shock you.

The drives included with your kit are pre-configured and jumpers are already set appropriately. DO NOT CHANGE JUMPER SETTINGS ON ANY DRIVE WE SUPPLY WITHOUT CONTACTING PTVUPGRADE FIRST!

Step 1 Using a phillips screwdriver, remove the top two screws on the rear of the unit.

Step 2 Also remove the four screws on the left and right sides of the unit (two on each side).




Step 3 Gently remove the cover by sliding back and lifting from the top.



Step 4 Unplug the fan's power connector from the system board.

Step 5 Remove the four black screws securing the drive bracket to the system chassis.

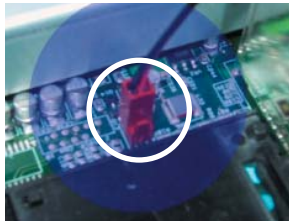

Step 6 Carefully disconnect the drive cable (left) and power cable (right) from the drive. Lift the drive tray from the unit (it may be easier to disconnect the cables as you remove the drive tray).



Step 7 If you are **adding** a drive, remove two of the screws attaching the original drive to the tray, and use two of these screws to mount the new drive to the bracket. If



you are **replacing** the drive, remove all of the screws and use them to attach the two new drives as shown. The positions of the drives on the bracket do not matter.

Step 8 If you are adding a drive, or replacing with two drives, you will need to replace the drive cable with the supplied cable. Ensure that the blue connector is




plugged into the TiVo system board. Also install the "Y" power connector supplied with your kit, as shown.

Step 9 Connect the drives to the drive and power connectors. Carefully re-insert the drive tray and ensure you do not pull out any connectors or crush any wires or

cables. Replace the four screws removed during Step 5.

Step 10 Reconnect the power connector for the cooling fan (see step 4) or your unit may overheat while in operation.

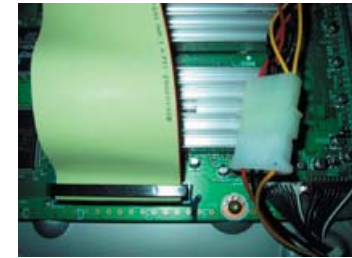

Step 11 Close your unit, connect everything and power it up! You can verify a successful installation by checking the System Information screen under Messages and Setup. If you are replacing drives, you will need to proceed to the System Reset menu and perform a 'clear and delete everything' and once this is complete, re-run guided setup.

If you encounter any problems or have questions, please do not hesitate to contact us at support@ptvupgrade.com. Additional resources are available in the support area of our web page.

